


## Assembly Instructions for 3050/3051

**We recommend installation of this fixture be done by a licensed electrician. Turn off power at the main fuse or circuit breaker box.**

**\*\* Actual parts may vary slightly depending upon the model**

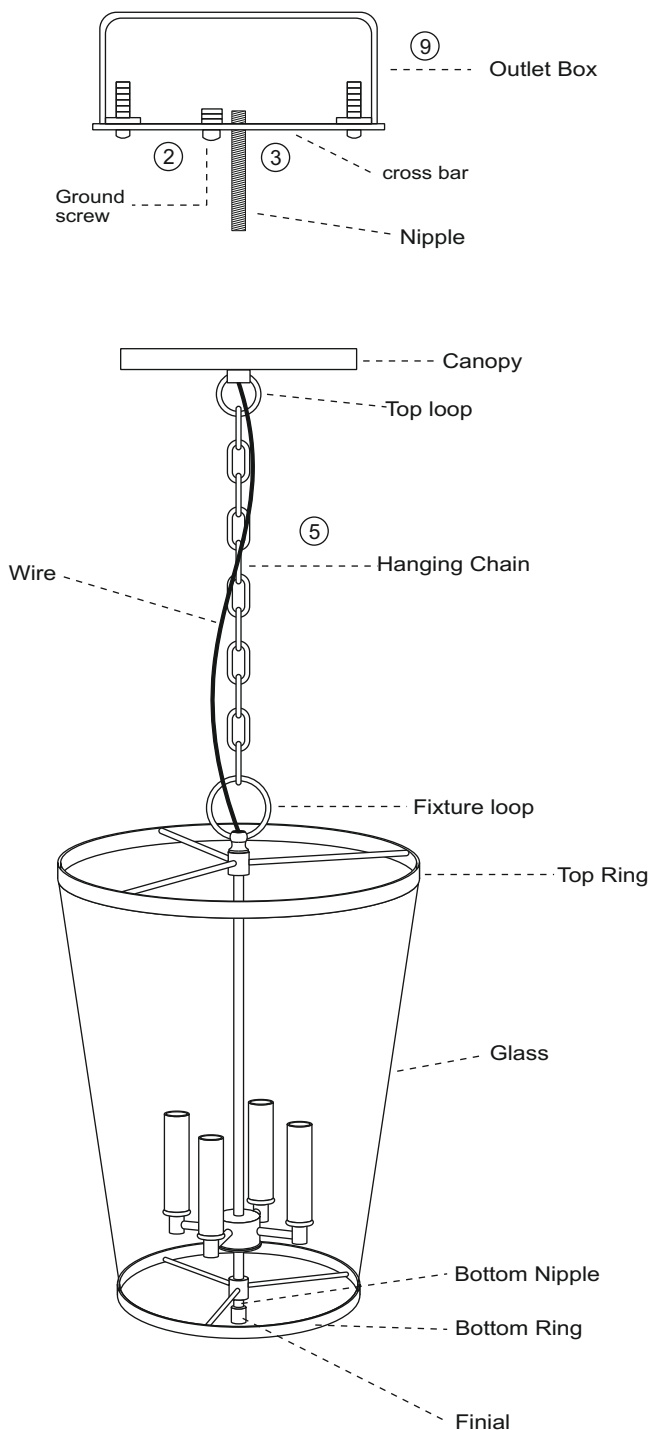

1. Remove the parts carefully from the box before discarding the carton.
2. Attach the cross bar to the outlet box with ground screw facing down.
3. Insert the nipple into the cross bar.
4. Adjust nipple coming out of the cross bar so that it is 1/4" out of the canopy.
5. Remove excess chain link from hanging chain. Measure 6" of lead wire beyond the end of hanging chain.
6. Attach top loop to canopy using nipple.
7. Place the glass on the bottom ring. Place bottom nipple of the wired lamp through the middle hole on the bottom ring. Use locknut to thread & lock below bottom ring.
8. Place top ring on the top of the glass through top nipple of the wired lamp and through the wire followed by fixture loop.
9. Excessive tightening of fixture loop may break the glass.
10. Slip lead & ground wire through top loop screwed into the nipple.
11. Attach assembled fixture glass to the hanging chain.
12. Thread lead wire and ground wire through the chain, top loop and nipple through the outlet box.
13. Fasten lead wire ridges to the white wire. Use wire nut to fasten it. Fasten smooth lead wire to the black wire in the box & use wire nut to fasten it.
14. Install bulbs (not included).
15. Restore circuit breaker.